

Manual for Software Update NC 315, NC 325 and NC 335

A Micro-SD memory card with a capacity of 1GB up to 8GB is necessary.

NC 315:

The firmware version is written on a sticker at the bottom side of the machine.

Download the "update.bin" file from the Olympia homepage (www.olympia-vertrieb.de). Load the "update.bin" file on a Micro-SD memory card. Switch the machine off. Insert the Micro-SD memory card in the corresponding slot provided on rear of the machine. The contacts must point downwards. Switch the machine on while press and hold down the ON/OFF button. During the upgrade process, the machine produces a noise. When the upgrade has been completed, the noise stops and the green PASS LED is lighting for short time. Release the ON/OFF button. Please check with a new Euro note that the update was successful.

Please write the new software version number on the sticker at the bottom side.

NC 325, NC 335:

Please check the firmware version. Switch the machine on while press and hold the ON/OFF button. After the self-test the display shows the firmware version number.

Download the "update.bin" file from the Olympia homepage (www.olympia-vertrieb.de). Load the "update.bin" file on a Micro-SD memory card. Switch the machine off. Insert the Micro-SD memory card in the corresponding slot provided on rear of the machine. The contacts must point downwards. Switch the machine on while press and hold down the ON/OFF button. During the upgrade process, the machine produces a noise. When the update has been completed, the noise stops and display shows the new version number. Release the ON/OFF button. Please check with a new Euro note that the update was successful.

NC 315, NC 325 and NC 335:

Please switch off the machine and take the micro SD card out of the machine. The update.bin file is deleted automatically.

If you want to complete the software update on several machines of the same model, set the update.bin" file attribute to "read only".